

# Assembly Instructions for the Smart Step Deck Kit #200101T



## Deck Conversion Kit

Model #200101T Assembly Instructions

### SAFETY INSTRUCTIONS:

- Install step per manufacturer's instructions.
- Locate Easy Entry Step on a solid base.
- iStep is designed for use by one person at a time.
- This step is intended for use as a swimming pool entry/exit only.
- Face the step when entering and exiting the pool.
- No jumping, no diving from the step.
- Do not swim through, behind or around the step.

### Tools Required

Cordless Screwgun/Drill, 1/8" Drill Bit,  
Standard Phillips Bit, Safety Glasses

SAND NOT INCLUDED. FLAT BOTTOM POOLS ONLY.



### Items Included in Kit:



Aluminum Upper Handrail, Deck Connector, Handrail Connector, Hardware Kit

**Step 1:** Start by removing the plastic upper handrail from your existing step.



**Step 2:** Next remove the lower handrail (vertical piece) from the third step from bottom.



For Questions Regarding Installation, Please Contact Main Access Customer Service 1-888-333-1134



# Deck Conversion Kit


## Model #200101T Assembly Instructions

**Step 3: Insert the smaller end of the handrail connector into the top of the lower handrail.**



Insert Handrail Connector into Lower RIGHT Handrail

**Step 4: Place deck connector on the upper handrail and place into the hole on the top step.**

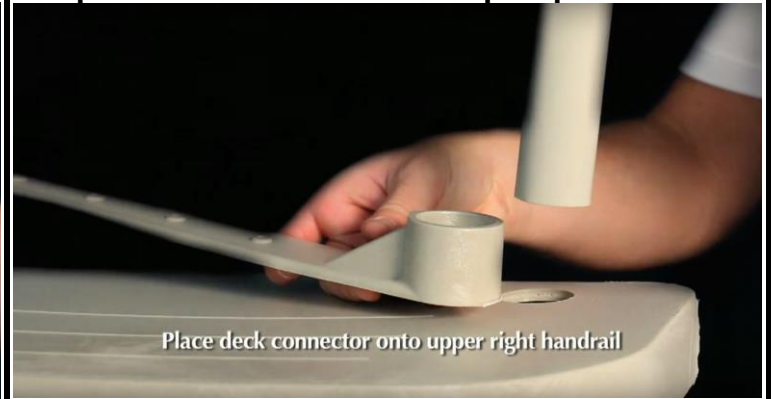

Place deck connector onto upper right handrail

**Step 5: Place upper handrail down over the handrail connector.**



Place Upper Handrail down over Handrail Connector on Lower Handrail

**Step 6: Drill #14 x 1 1/4" screws into handrails through all upper and lower risers.**



Drill #14 x 1 1/4" screws into handrails through the side risers

### Step 7: Pool Installation

**Note: Two people are required for installation.**

A total weight of approximately 100 lbs. is required to keep the step from moving once in place under water. With the assistance of another person, carefully place the step in the pool. Place the two sealed bags of sand (not included) in ballast bags (M) over the ballast tray (D) to hold the step in place. Walk step back against the pool wall to prevent swim behind hazards.

\*Optional\* Purchase (2) Anchors (#200888) to weigh down the Step. Sand not included.



### Step 8: Deck Mount Installation

With the step in position close to the pool wall, slide the deck connectors (H) installation position on either the pool top seat or pool deck. Secure to the deck with two #8 x 1" screws (N). Use a minimum of two screws per deck connector. Secure each deck connector (H) to each upper handrail (E1) by using a single #8 x 1" screw.

**All Finished!**

